


ORIENTATION:

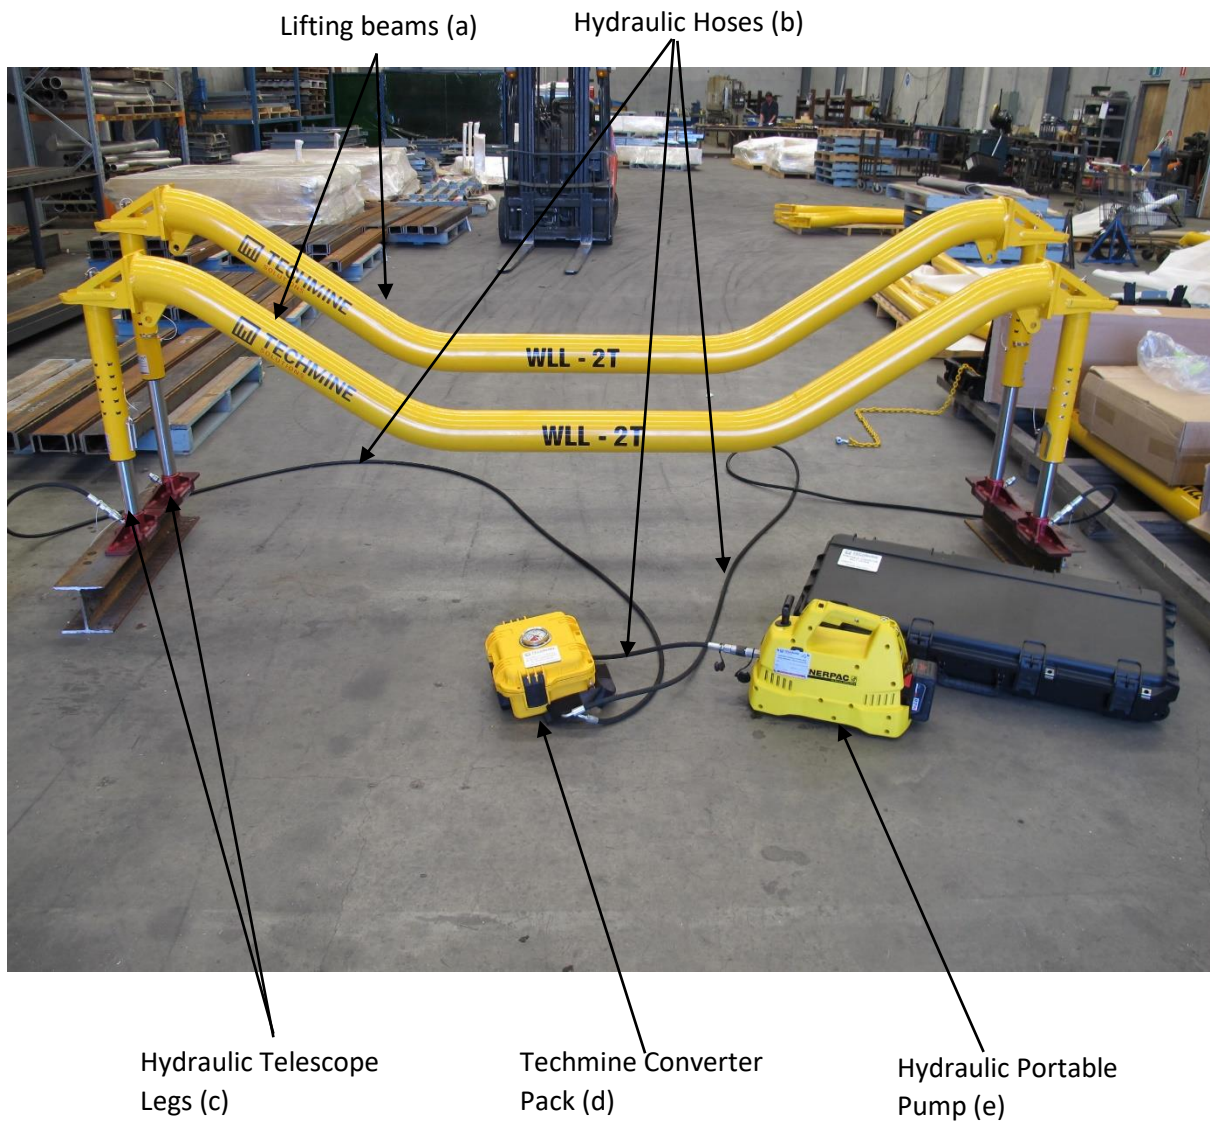

SETTING UP:



Wipe down stringer



Stand up left and right telescopes (c)



Pass lifting beam (a) under conveyor



Position lifting beam (a) as centrally as possible



Install and tighten M24 securing nuts (¼ turn)



Ensure hydraulic hoses are clean before connecting



Connect hydraulic hoses (b) to hydraulic telescope (c)




Connect hydraulic hoses (b) to hydraulic pump (e)

Operation:



Flick isolation switch to "ON" position

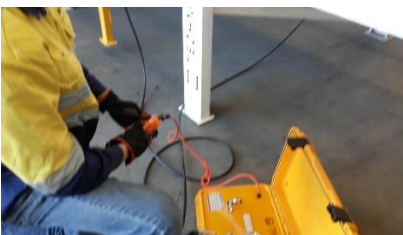

Use pendant to raise lifter to desired height



Monitor lift using hydraulic pressure gauge



Slide in locking pin to secure load



Lower lifter onto locking pin



Ensure hydraulic pressure gauge on pump reads 0



QUICK START GUIDE

HYDRAULIC BELT LIFTER (TECHMINE HYDRAULIC PUMP)